

FOGGER USER MANUAL



WWW.VENUELIGHTINGEFFECTS.COM

The Venue[™] Party Pack Fogger sets the right mood for showing your lights at their optimal best. Perfect for club, dance floor, or special event.

SPECIFICATIONS

Power Input:120VAC 60HzFuse:7A 125VFog Output:2500 Cubic Feet/MinuteSize:L 12.9" x W 6.3" x H 5.1"Heater:700 WattsWarm-up Time:4 MinutesTank Capacity:1 LiterWeight:8.1 lbs / 3.7 kg

IMPORTANT SAFETY INSTRUCTION

- For indoor use only. Do not expose the fogger to moisture.
- Place the fogger horizontally on floor or hang it from the ceiling at no more than a 15-degree angle.
- Keep at least 8" away from all other objects to allow for ventilation and cooling.
- Keep out of reach of children.
- Do not place the fogger close to any flammable or explosive substance in order to avoid fire or explosion.
- Point the nozzle away from people when in use.
- Do not operate when fog fluid is running now. Before refilling unit, turn off the machine.
- Be careful not to exceed the maximum fluid level.
- Unplug the unit when not in use.

HOW TO OPERATE

- Place the unit horizontally and fill the tank with high quality fog fluid such as Black Label Fog Fluid.
- Plug the remote into socket marked "Control Input" which is found on the back on the unit.
- Connect the machine with the proper power supply and turn on the power switch.
- Wait a few minutes until the unit warms up. When the red indicator on the remote lights up, the unit is ready for use. Now you can press the button on the remote to begin fogging.
- It is normal for your fogger to have a recycling period after long bursts. At that point the unit will shut itself down for a short period in order to heat back up. During this time, no fog can be produced. The red light on the remote will illuminate when the unit is ready for action.
- You should turn off the fog machine before refilling.

MAINTENANCE

- Always use a high quality fog liquid such as Black Label Fog Fluid.
- Do not operate the machine when fluid is low. Be careful not to exceed the maximum fluid level.
- To maintain optimum performance and minimize wear, unit should be cleaned frequently -- usage and environment are contributing factors in determining how often. As a general rule, unit should be cleaned after every 40 hours of use. Clean with a solution of 80% water and 20% vinegar. Empty the tank of any remaining fog liquid and pour in the water and vinegar solution. Spray until the tank is empty. Clean the nozzle separately with a 100% vinegar solution. Dust build up, and/or using heavy fog fluid may reduce fog output performance and can cause overheating. This can lead to a reduction in the fogger's life and will increase mechanical wear.
- Be sure to power off unit before conducting maintenance.
- If you experience low output, mechanical noise, or no output at all, please unplug immediately. Check the fluid level, the
 external fuse, remote connection, and the power from the wall. If all of these are OK, plug the unit in again. If fogger does
 not function after 30 seconds, disconnect power or permanent damage to the unit may result. Return the machine to your
 dealer. Always drain the tank before mailing or transporting the unit.
- Unplug the unit when not in use.
- In the unlikely event your unit may require service, please contact your dealer or visit www.venuelightingeffects.com

IMPORTANT SAFETY INSTRUCTIONS



This symbol is intended to alert the user to the presence of non-insulated "dangerous voltage" within the products enclosure.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the unit.



Apparatus shall not be exposed to dripping or splashing. Objects filled with liquids, such as vases, shall not be placed on the apparatus.





- 1. Read all safety and operating instructions before using this product.
- 2. All safety and operating instructions should be kept for future reference.
- 3. Read and understand all warnings listed on the operating instructions.
- 4. Follow all operating instructions to operate this product.
- 5. This product should not be used near water, i.e., bathtub, sink, swimming pool, wet basement, etc.
- 6. Only use dry cloth to clean this product.
- 7. Do not block any ventilation openings, it should not be placed flat against a wall or placed in a built-in enclosure that will impede the flow of cooling air.
- 8. Do not install this product near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
- 9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus. Do not break the ground pin of the power supply cord.
- 11. Only use attachments specified by the manufacturer.
- 12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, exercise caution when moving.
- 13. Unplug this apparatus during lightning storms or when unused for a long period of time.
- 14. Care should be taken so that objects do not fall and liquids are not spilled into the unit through the ventilation ports or any other openings.
- 15. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way.
- 16. WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- 17. When a mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.



