




# revolver wash

DUAL-SIDED MOVING HEAD EFFECT LIGHT  
WITH WASH AND MOONFLOWER

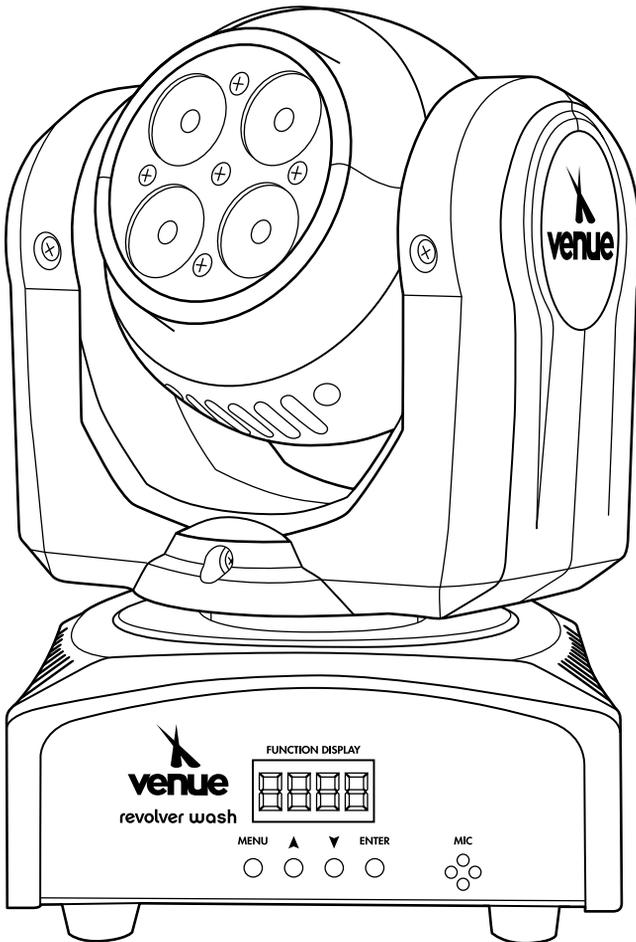





## INTRODUCTION

The Venue Revolver Wash is a DMX intelligent, dual sided, moving head effect light, which includes both a wash and moonflower effect. It is lightweight and compact which makes it a great light for mobile DJs, clubs and parties. This unit can be used as a standalone fixture in sound-activated mode, or controlled via DMX controller.

## TABLE OF CONTENTS

<b>BEFORE YOU BEGIN</b> .....	4	Audio sensitivity .....	13
What is included .....	4	Custom static colors/ Manual Control .....	13
Unpacking instructions .....	4	<b>DMX OPERATION</b> .....	14
Manual conventions .....	4	Configuring the Starting Address .....	14
Icons .....	4	Master/Slave (Standalone Operating Modes) .....	14
<b>SAFETY INSTRUCTIONS</b> .....	5	10-Ch mode DMX operation .....	15
<b>INTRODUCTIONS</b> .....	6	12-Ch mode DMX operation .....	15
Control Features .....	6	20-Ch mode DMX operation .....	15
Additional Features .....	6	DMX Parameters .....	16
Control Panel .....	6	<b>APPENDIX</b> .....	18
<b>SETUP</b> .....	7	DMX Primer .....	18
AC Power .....	7	General Troubleshooting .....	18
Back Panel .....	7	Fixture Linking .....	19
Mounting Orientation .....	8	DMX Data Cable .....	19
Rigging .....	8	Cable Connectors .....	19
Signal linking .....	9	3-Pin to 5-pin Conversion Chart .....	20
<b>OPERATING INSTRUCTIONS</b> .....	9	Setting Up a DMX Serial Data Link .....	20
Control Panel Functions .....	9	General Maintenance .....	20
Menu Map .....	10	<b>TECHNICAL SPECIFICATIONS</b> .....	21
<b>STANDALONE OPERATION</b> .....	12	<b>WARRANTY</b> .....	22
Automatic .....	12		
Sound-active .....	13		

# BEFORE YOU BEGIN

## What Is Included

- Revolver Wash
- Mounting Bolts (x2)
- Power Cord
- Mounting Bracket
- 13mm Safety Loop
- User Manual

## Unpacking Instructions

Carefully unpack the carton, then check the contents to ensure that all parts are present and have been received in good condition. Notify the shipper immediately and retain packing material for inspection if any parts appear damaged from shipping, or the carton itself shows signs of mishandling. Save the carton and all packing materials. In the event that a fixture must be returned to the factory, it is important that the fixture be returned in the original factory box and packing.

## Manual Conventions

Venue® manuals use the following conventions to differentiate certain types of information from the regular text.

CONVENTION	MEANING
<Menu>	Key to be pressed on the fixture's Control Display
1~512	Range of values
50/60	Set of values of which only one can be chosen
Settings	Menu option not to be modified (for example, showing the operating mode/current status)
MENU > Settings	Sequence of menu options to be followed
ON	Value to be entered or selected

## Icons

This manual uses the following icons to indicate information that requires special attention on the part of the user.

ICONS	MEANING
	This paragraph contains critical installation, configuration or operation information. Failure to comply with this information may render the fixture partially or completely inoperative, cause damage to the fixture or cause harm to the user.
	This paragraph contains important installation or configuration information. Failure to comply with this information may prevent the fixture from functioning correctly.
	This paragraph reminds you of useful, although not critical, information.

# SAFETY INSTRUCTIONS



Please read these instructions carefully. It includes important information about the installation, usage and maintenance of this product.

## FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
  - (1) This device may not cause harmful interference, and
  - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Please keep this User Manual for future reference.

- Make sure that you are connecting to the proper voltage, and that the line voltage you are connecting to is not higher than that stated on the decal or rear panel of the fixture.
- This product is intended for indoor use only! To prevent risk of fire or shock, do not expose fixture to rain or moisture.
- Make sure there are no flammable materials close to the unit while operating.
- The unit must be installed in a location with adequate ventilation, at least 20" (50 cm) from adjacent surfaces. Be sure that no ventilation slots are blocked.
- Always disconnect from the power source before servicing or replacing the fuse and be sure to replace with same type fuse.
- Secure fixture to included safety loop using a safety chain.
- Maximum ambient temperature is 104° F (40° C). Do not operate the fixture at temperatures higher than this.
- In the event of a serious operating problem, stop using the unit immediately. Never try to repair the unit yourself.
- Never connect the device to a dimmer pack.
- Make sure the power cord is never crimped or damaged.
- Never disconnect the power cord by pulling or tugging on the cord.
- Never carry the fixture directly from the cord. Always use the hanging/mounting bracket.
- Avoid direct eye exposure to the light source while it is on.

# INTRODUCTIONS


## Control Features

- Dual-sided moving head, with moonflower and wash effects
- Static colors and RGBW color mixing with or without DMX controller
- 540° pan control and unlimited tilt control, with or without DMX controller
- Built-in automated programs via master/slave or DMX with variable speed
- Built-in sound activated programs via master/slave or DMX
- 10, 12, and 20 channel DMX-512 operation

## Additional Features

- Includes rubber feet for desktop placement & metal bracket/safety loop for truss mounting

## Control Panel

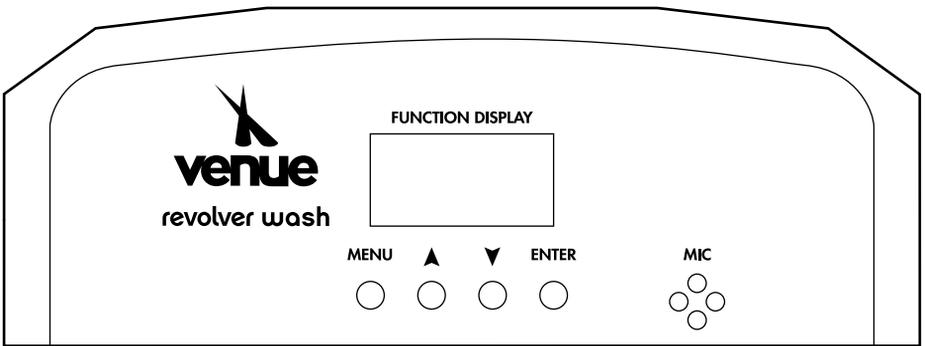

# SETUP

## AC Power

This fixture runs on 100~240 VAC, 50/60 Hz. Before powering on the unit, make sure the line voltage is within the range of accepted voltages.

To determine the power requirements for a particular fixture, see the label affixed to the bottom of the fixture or refer to the fixture's specifications chart. A fixture's listed current rating indicates its average current draw under normal conditions.




Always connect the fixture to a switched circuit. Never connect the fixture to a rheostat (variable resistor) or dimmer circuit, even if the rheostat or dimmer channel is used only as a 0 to 100% switch.



Always connect the fixture to a circuit with a suitable electrical ground.

## Back Panel

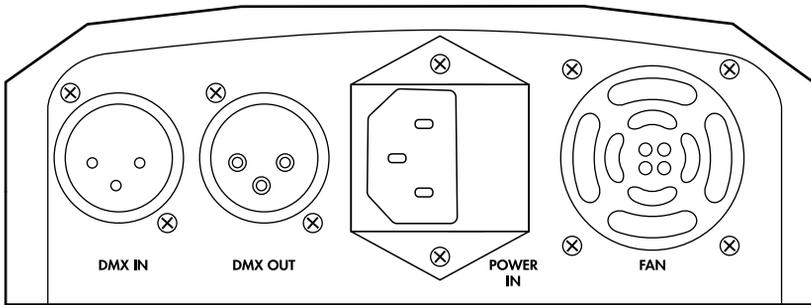


## Mounting Orientation

The Revolver Wash includes a metal bracket and safety loop for hanging upside-down only.

## Mounting Orientation


Be sure that the structure can support the weight of the fixture. Please see the "Technical Specifications" section of this manual for a detailed weight listing. Mount the fixture securely. This may be done with a screw, nut and bolt, or a hanging clamp (not included). The hole in each bracket can fit a 13mm screw or bolt. When rigging, consider routine maintenance and control panel access. Please see the following steps for installation.

- Ensure that cables are neatly organized and sufficient space is provided to allow full movement of the fixture.
- There are rubber feet attached to the base, which may be used primarily for floor or desk standing positions.
- Safety cables must always be used, in conjunction with the included safety loop.

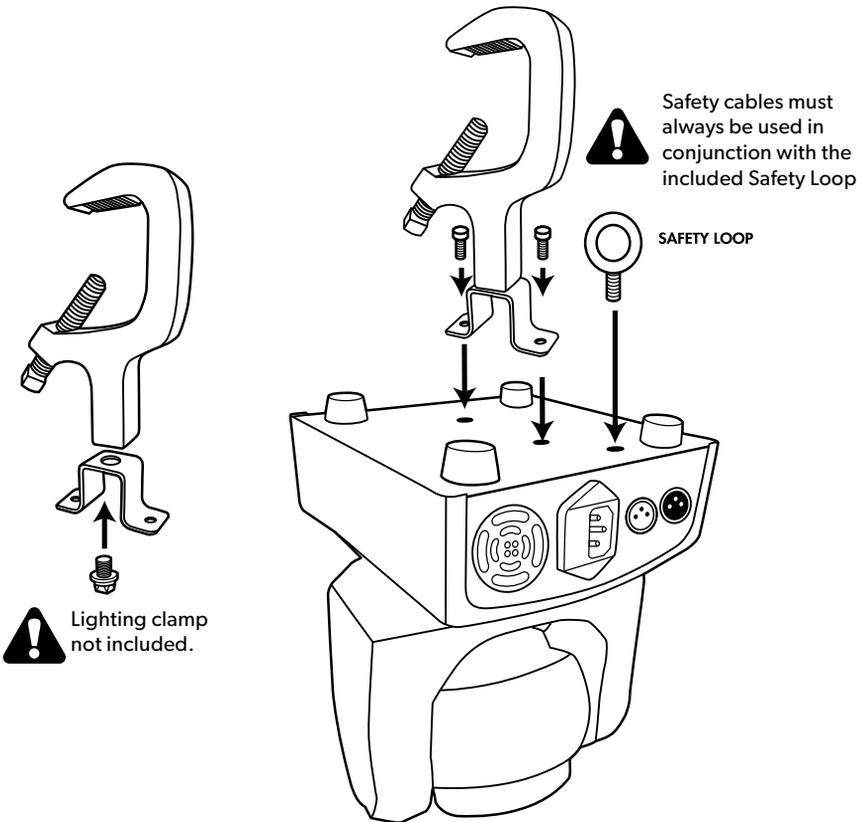

## Signal Linking

In order to use this fixture in a DMX or master/slave operation, you must daisy chain using DMX cables to link from one fixture to another.

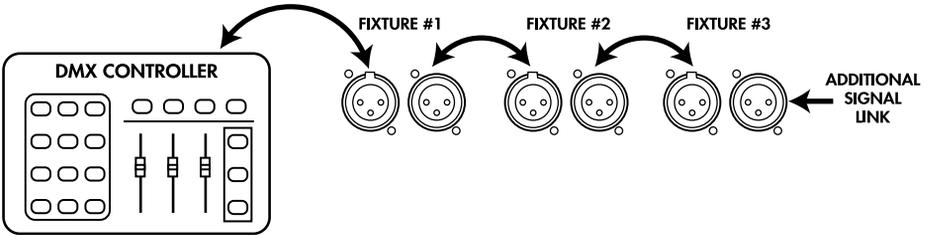


## OPERATING INSTRUCTIONS

### Control Panel Buttons

Access these functions using the four buttons located directly underneath the LED Control Display.

BUTTON	FUNCTION
<Menu>	Scrolls through the current operating mode, as well as back out of the current menu option
<UP>	Selects increasing advancement in the value
<DOWN>	Selects decreasing advancement in the value
<ENTER>	Selects a value and stores it to memory

### FUNCTION DISPLAY

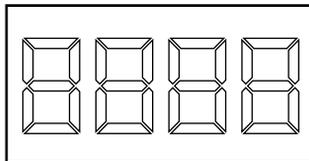

The Control Display shows the current state of the unit. It is used to select the operating mode, as well as the sub-features. For detailed functions, please see the section below.

### Control Panel Menu Selections

	MAIN FUNCTION	SUB-FUNCTION	SELECTION	INSTRUCTION
<b>DMX Address</b>	Addr		1-512	Select starting DMX address
<b>Channel Mode</b>	ChNd	10CH		Select between 10-channel, 12-channel, and 20-channel DMX modes.
		12CH		
		20CH		
<b>Master/Slave Mode</b>	SLNd	NASt		Designate as the master unit
		SL1		Designate as slave unit
		SL2		Designate as slave unit in random mode, switches between slave and Auto Program
<b>Scene/Program</b>	ShNd	SH0		Select pre-programmed chase 0 - 10
		SH1		
		SH2		
		SH3		
		SH4		
		SH5		
		SH6		
		SH7		
		SH8		
		SH9		
		SH10		
<b>Auto Mode</b>	Auto	On		Enable or disable automatic movement sequence and must be switched to "OFF" for Sound Active mode
		Off		
<b>Sound Active</b>	SoUn	On		Enable or disable sound-active mode, Auto Mode must be turned "OFF" for Sound Active mode
		Off		
<b>Audio Sensitivity</b>	Sens		0-100	Select sensitivity level of the microphone between 0 (less sensitive) and 100 (more sensitive).
<b>Pause Mode</b>	bLNd	Yes		Pause current program (Blackout)
		No		Resume program

## Control Panel Menu Selections (Continued)

	MAIN FUNCTION	SUB-FUNCTION	SELECTION	INSTRUCTION
Dimming	dINd	Stda		Select "Standard" dimming mode
		StGE		Select "Stage" dimming mode
		tv		Select "TV" dimming mode
		ArAL		Select "Architectural" dimming mode
		tHAL		Select "Theatrical" dimming mode
Pan Turn	Plnt	No		Select standard or reverse X-axis movement
		Yes		
Tilt Turn	tlnt	No		Select standard or reverse Y-axis movement
		Yes		
Led Display	Led	On		Select whether the LED display will always be illuminated.
		Off		
Flip Display	dISP			When this menu option is selected, the display will instantly flip upside-down, for better visibility when hanging from a truss.
Test	teSt			When this menu option is selected, the light will test movement, and cycle through all colors until "Menu" is pressed again.
Manual Control	Nanu	Pan	0 - 255	Manually alter parameters, specifying values between 0 - 255 for all options.
		Tilt	0 - 255	
		Red 1	0 - 255	
		Green 1	0 - 255	
		Blue 1	0 - 255	
		White 1	0 - 255	
		Red 2	0 - 255	
		Green 2	0 - 255	
		Blue 2	0 - 255	
		White 2	0 - 255	
		Dimmer	0 - 255	
		Strobe	0 - 255	


## Control Panel Menu Selections (Continued)

	MAIN FUNCTION	SUB-FUNCTION	SELECTION	INSTRUCTION
White Color Balance Setting	bALA	Red 1		Manually alter white color balance, specifying values between 125 - 255 for all options.
		Green 1		
		Blue 1		
		Red 2		
		Green 2		
		Blue 2		
Reset	rSet			When this menu option is selected, the light will briefly reset, and factory settings will be implemented.

### Pan/Tilt Fine-Tuning Function

To fine-tune the pan or tilt position of the fixture, follow the steps below:

1. Press <MENU> until "Plnt" or "tInt" appears on the LED screen.
2. Press and hold <ENTER> until the display reverts to either "Plnt" or "tInt".
3. Press <ENTER>.
4. Using <UP> and <DOWN>, adjust the fine-tuning of your tilt or pan position between -127 – 127.
5. Press <ENTER> to confirm settings.

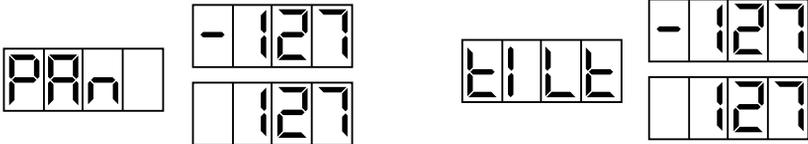

## STANDALONE OPERATION

### Automatic

This fixture has 11 preprogrammed chases. These are accessed via the Control Display (page 6). The speed can be adjusted between a slow pan and quick sequences.

1. Press <MENU> until "ShnD" appears on the LED screen.
2. Press <ENTER>.
3. Using <UP> and <DOWN>, select the desired program (Sh0-Sh10).
4. Press <ENTER>.
5. Press <MENU> until "Auto" appears on the LED screen.
6. Using <UP> and <DOWN>, select "on" to enable quick movement sequences, or "oFF" to enable a slow pan.
7. Press <ENTER> to confirm settings.

## Sound-Active

While an automatic program is enabled, you can choose whether or not to use the built-in microphone for sound-active response. This option is accessed via the Control Display (page 6).

1. Press <MENU> until "SoUn" appears on the LED screen.
2. Press <ENTER>.
3. Using <UP> and <DOWN>, select either "on" or "oFF" to enable or disable sound-active mode.
4. Press <ENTER> to confirm settings.
5. Press <MENU> until "Auto" appears on the LED screen.
6. Using <UP> and <DOWN>, select "off" to allow sound active movement, or "on" to enable quick auto movement sequences.
7. Press <ENTER> to confirm settings.

## Audio Sensitivity

While in sound active mode, you can adjust the sensitivity of the microphone via the Control Display (page 6).

1. Activate a sound-active program (SoUn > ON).
2. Press <MENU> until "SENS" appears on the LED screen .
3. Press <ENTER>.
4. Press <UP> or <DOWN> to adjust the sensitivity between 0 and 100  
(0 = least sensitive, 100 = most sensitive)
5. Press <ENTER> to save your sensitivity setting.

## Custom Static Colors / Manual Control

This fixture has the ability to accept custom static color settings, as well as alter the dimmer, strobe, and pan/tilt angle through the main menu. These are accessed via the Control Display (page 6).

1. Press <MENU> until "NAnu" appears on the LED screen.
2. Press <ENTER>.
3. Using <UP> and <DOWN>, select the color or parameter you would like to adjust.
4. Press <ENTER>.
5. Using <UP> and <DOWN>, select the desired value (0 - 255). By selecting 0 for a color parameter, that color will remain off.
6. Press <ENTER>.
7. Repeat steps 3 - 6 until the desired color and position is obtained. The current setting will remain active until <MENU> is pressed again, at which point the unit will revert back to its most recent program.

The colors are represented by the following in the menu map:

- Red1 = Moonflower Red (0 – 255)
- Gee1 = Moonflower Green (0 – 255)
- bLu1 = Moonflower White (0 – 255)
- Uh11 = Moonflower White (0 – 255)
- Red2 = Wash Red (0 - 255)
- Gee2 = Wash Green (0 – 255)
- bLu2 = Wash Blue (0 – 255)
- Uh12 = Wash White (0 – 255)

## DMX OPERATION

This is the operating mode which will allow for an external DMX controller. You must set the starting address for this mode. If this is your first time using DMX, then it is recommended that you refer to the "DMX Primer" section in the "Appendix" of this manual.

1. Press **<MENU>** until "ChNd" appears on the LED screen
2. Using **<UP>** and **<DOWN>**, select either "10-CH", "12-CH", or "20-CH".
3. Press **<ENTER>**.

### Configuring The Starting Address

Each fixture requires a starting address from 1~512. A fixture requiring one or more channels for control begins to read the data on the channel indicated by the starting address. For example, a fixture that uses seven DMX channels and is addressed to start on DMX channel 100, will read data from channels: 100, 101, 102, 103, 104, 105 and 106. Choose the starting addresses for each fixture so that the channels used do not overlap. In addition, you should note the starting address selected for future reference.

1. Press **<MENU>** until "Addr" appears on the LED screen.
2. Press **<ENTER>**.
3. Using **<UP>** and **<DOWN>**, select the desired DMX address (1-512).
4. Press **<ENTER>**.

### Master/Slave (Standalone Operating Modes)

This is the operating mode which will allow one fixture to act as the master and control all of the other slave fixtures. You must set both the master and the slave(s) fixtures to the correct mode for this operation.

#### Master Settings:

1. Connect the fixtures with DMX cables, as shown in the "Fixture Linking" section.
2. Press **<MENU>** until "SLNd" appears on the LED screen.
3. Press **<ENTER>**.
4. Using **<UP>** and **<DOWN>**, select "NAST"
5. Press **<ENTER>**.

#### Slave Settings:

1. Press **<MENU>** until "SLNd" appears on the LED screen.
2. Press **<ENTER>**.
3. Using **<UP>** and **<DOWN>**, select either "SL 1" or "SL 2".
4. Press **<ENTER>**.



Note that SL1 and SL2 settings react to the master unit differently:

SL1 = Normal Slave Mode (follows the master unit exactly)

SL2 = Random Slave Mode (switches between slave setting and automatic internal program)



Although any fixture in the DMX daisy chain may be set to master, it is advisable to set the master as the first fixture in the line.

Only one fixture may be set to master.

Do not connect a DMX controller to the daisy chain for this operating mode.

It does not matter which DMX mode is selected for the slave fixtures.

Either mode will be effective.

## 10-Ch Mode DMX Operation

CHANNEL	CHANNEL FUNCTION
1	Pan Turn
2	Tilt Turn
3	Tilt Unlimited Rotation
4	Red1 Red2
5	Green1 Green2
6	Blue1 Blue2
7	White1 White2
8	Strobe
9	Open Light
10	Multi- Working Mode

## 12-Ch Mode DMX Operation

CHANNEL	CHANNEL FUNCTION
1	Pan Turn
2	Tilt Turn
3	Tilt Unlimited Rotation
4	Pan/Tilt Speed
5	Red1 Red2
6	Green1 Green2
7	Blue1 Blue2
8	White1 White2
9	Strobe
10	Open Light
11	Dimming
12	Multi- Working Mode

## 20-Ch Mode DMX Operation

CHANNEL	CHANNEL FUNCTION
1	Pan Turn
2	Tilt Turn
3	Tilt Unlimited Rotation
4	Pan/Tilt Speed
5	Red1
6	Green1
7	Blue1
8	White1
9	Red2
10	Green2
11	Blue2
12	White2
13	Strobe
14	Open Light
15	Dimming
16	Color Change
17	Color Macro Speed
18	Pan/Tilt Macro
19	Pan/Tilt Macro Speed
20	Multi-Working Mode

## 20-Ch Mode DMX Operation

FUNCTION	VALUE	PERCENT/SETTING	MODE 10 CH	MODE 12 CH	MODE 20 CH
Pan	000-255	0~100%	1	1	1
Tilt	000-255	0~100%	2	2	2
Tilt Unlimited Rotation	000-127 128-189 190-193 194-255	Null Counter-clockwise from fast to slow Stop Clockwise direction from slow to fast	3	3	3
Pan/Tilt Speed	000-255	From fast to slow		4	4
Red1	000-255	0~100%	4	5	5
Green1	000-255	0~100%	5	6	6
Blue1	000-255	0~100%	6	7	7
White1	000-255	0~100%	7	8	8
Red2	000-255	0~100%	4	5	9
Green2	000-255	0~100%	5	6	10
Blue2	000-255	0~100%	6	7	11
White2	000-255	0~100%	7	8	12
Strobe	000-007 008-015 016-131 132-139 140-181 182-189 190-231 232-239 240-247 248-255	Off Open Strobe from slow to fast Open Fast close and slow open Open Fast open and slow close Open Random strobe Open	8	9	13
Open Light	000-255	0~100%	9	10	14
Dim Modes	000-020 021-040 041-060 061-080 081-100 101-255	Std(Standard) StGE(Stage) tv(TV) ArAL(Architectural) tHAL(Theatrical) Default setting		11	15
Color Color Select	000-007 008-011 012-015 016-019 020-022 023-026 027-030 031-034 035-037 038-041 042-045 046-048 049-052 053-056 057-060 061-063 064-067	Null Color 1 Color 2 Color 3 Color 4 Color 5 Color 6 Color 7 Color 8 Color 9 Color 10 Color 11 Color 12 Color 13 Color 14 Color 15 Color 16			16

20-Ch Mode DMX Operation (Continued)

FUNCTION	VALUE	PERCENT/SETTING	MODE 10 CH	MODE 12 CH	MODE 20 CH
	068-071	Color 17			
	072-075	Color 18			
	076-078	Color 19			
	079-082	Color 20			
	083-086	Color 21			
	087-089	Color 22			
	090-093	Color 23			
	094-097	Color 24			
	098-101	Color 25			
	102-104	Color 26			
	105-108	Color 27			
	109-112	Color 28			
	113-115	Color 29			
	116-119	Color 30			
	120-123	Color 31			
	124-127	Color 32			
	128-131	Color Macro 1			
	132-135	Color Macro 2			
	136-139	Color Macro 3			
	140-143	Color Macro 4			
	144-147	Color Macro 5			
	148-151	Color Macro 6			
	152-155	Color Macro 7			
	156-159	Color Macro 8			
	160-163	Color Macro 9			
	164-167	Color Macro 10			
	168-171	Color Macro 11			
	172-175	Color Macro 12			
	176-179	Color Macro 13			
	180-183	Color Macro 14			
	184-187	Color Macro 15			
	188-191	Color Macro 16			
	192-195	Color Fade Macro 1			
	196-199	Color Fade Macro 2			
	200-203	Color Fade Macro 3			
	204-207	Color Fade Macro 4			
	208-211	Color Fade Macro 5			
	212-215	Color Fade Macro 6			
	216-219	Color Fade Macro 7			
	220-223	Color Fade Macro 8			
	224-227	Color Fade Macro 9			
	228-231	Color Fade Macro 10			
	232-235	Color Fade Macro 11			
	236-239	Color Fade Macro 12			
	240-243	Color Fade Macro 13			
	244-247	Color Fade Macro 14			
	248-251	Color Fade Macro 15			
	252-255	Color Fade Macro 16			
Color Macro Speed	000-255	From slow to fast			17
Pan/Tilt Macro	000-015 016-035 036-055 056-075 076-095 096-115 116-135 136-155 156-175 176-195 196-215 216-235 236-255	NULL Macro 1 Macro 2 Macro 3 Macro 4 Macro 5 Macro 6 Macro 7 Macro 8 Macro 9 Macro 10 Macro 11 Macro 12			18

## 20-Ch Mode DMX Operation (Continued)

FUNCTION	VALUE	PERCENT/SETTING	MODE 10 CH	MODE 12 CH	MODE 20 CH
Pan/Tilt Speed	000-255	From slow to fast			19
Multi-Working Mode	000-069 070-079 080-089 090-099 100-179 180-189 190-199 200-209 210-249 250-255	N/A Pause light on pan/tilt turn N/A Pause light on color change N/A Auto Mode N/A Reset N/A Sound-active Mode	10	12	20

## APPENDIX

### DMX Primer

There are 512 channels in a DMX connection. Channels may be assigned in any manner. A fixture capable of receiving DMX will require one or a number of sequential channels. The user must assign a starting address on the fixture that indicates the first channel reserved in the controller. There are many different types of DMX controllable fixtures and they all may vary in the total number of channels required. Choosing a start address should be planned in advance. Channels should never overlap. If they do, this will result in erratic operation of the fixtures whose starting address is set incorrectly. You can however, control multiple fixtures of the same type using the same starting address as long as the intended result is that of unison movement or operation. In other words, the fixtures will be slaved together and will all respond exactly the same. Consult the Owner's Manual to your DMX controller for more information.

DMX fixtures are designed to receive data through a serial Daisy Chain. A Daisy Chain connection is where the DATA OUT of one fixture connects to the DATA IN of the next fixture. The order in which the fixtures are connected is not important and has no effect on how a controller communicates to each fixture. Use an order that provides for the easiest and most direct cabling. Connect fixtures using shielded two-conductor twisted pair cable with three pin XLR male to female connectors. The shield connection is pin 1, while pin 2 is Data Negative (S-), and pin 3 is Data Positive (S+).

### General Troubleshooting

SYMPTOM	POSSIBLE CAUSE(S)	POSSIBLE ACTION(S)
Breaker/Fuse keeps blowing	<ul style="list-style-type: none"> <li>Excessive circuit load</li> <li>Short circuit along the power wires</li> </ul>	<ul style="list-style-type: none"> <li>Check total load placed on the electrical circuit</li> <li>Check for a short in the electrical wiring (internal and/or external)</li> </ul>
Device does not power up	<ul style="list-style-type: none"> <li>No power</li> <li>Loose power cord</li> </ul>	<ul style="list-style-type: none"> <li>Check for power on Mains</li> <li>Check power cord</li> </ul>
Fixture is not responding to DMX	<ul style="list-style-type: none"> <li>Wrong DMX addressing</li> <li>Damaged DMX cables</li> <li>Wrong polarity settings on the controller</li> <li>Loose DMX cables</li> <li>Faulty DMX interface</li> <li>Faulty Main PCB</li> </ul>	<ul style="list-style-type: none"> <li>Check Control Display and unit addressing</li> <li>Check DMX cables</li> <li>Check polarity switch settings on the controller</li> <li>Check cable connections</li> <li>Replace DMX input</li> <li>Replace Main PCB</li> </ul>
Loss of signal	<ul style="list-style-type: none"> <li>Non DMX cables</li> <li>Bouncing signals</li> <li>Long cable / Low level signal</li> <li>Too many fixtures</li> <li>Interference from AC wires</li> </ul>	<ul style="list-style-type: none"> <li>Use only DMX compatible cables</li> <li>Install terminator as suggested</li> <li>Install amplifier right after fixture with strong signal</li> <li>Install an optically coupled DMX splitter after unit #32</li> <li>Keep DMX cables separated from power cables or black light</li> </ul>

## Fixture Linking

You will need a serial data link to run light shows of one or more fixtures using a DMX controller or to run synchronized shows on two or more fixtures set to a master/slave operating mode. The combined number of channels required by all the fixtures on a serial data link determines the number of fixtures the data link can support.



Fixtures on a serial data link must be daisy chained in one single line. To comply with the EIA-485 standard, no more than 32 fixtures should be connected on one data link. Connecting more than 32 fixtures on one serial data link without the use of a DMX optically-isolated splitter may result in deterioration of the DMX signal.

Maximum recommended serial data link distance: 500 m (1640 ft)  
Maximum recommended number of fixtures on a serial data link: 32

## DMX Data Cable


Use a cable which meets the specifications for EIA RS-485 applications. Standard microphone cables cannot transmit DMX data reliably over long distances. The cable must have the following characteristics:

Type:	Shielded, 2-conductor, twisted pair
Maximum capacitance between conductors:	30 pF/ft
Maximum capacitance between conductor and shield:	55 pF/ft
Maximum resistance:	20 Ohms/1000 ft
Nominal impedance:	100 ~ 140 Ohms

## Cable Connectors

Cabling must have a male XLR connector on one end and a female XLR connector on the other end.

### DMX CONNECTOR CONFIGURATION

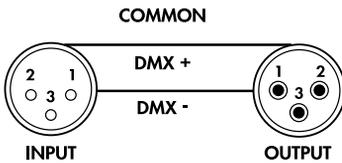

### TERMINATOR

To avoid signal transmissions problems and interference, it is always advisable to connect a DMX signal terminator.

120 ohm 1/4 W resistor between pin 2 (DMX-) and pin 3 (DMX+) on the output of the last fixture



Do not allow contact between the common and the fixture's chassis ground. Grounding the common can cause a ground loop, and your fixture may perform erratically. Test cables with an Ohm meter to verify correct polarity and to make sure the pins are not grounded or shorted to the shield or each other.

## 3-Pin To 5-Pin Conversion Chart




If you use a controller with a 5-pin DMX output connector, you will need to use a 5-pin to 3-pin adapter. The chart below details a proper cable conversion:

3-PIN TO 5-PIN CONVERSION CHART		
Conductor	3-Pin Female (Output)	5-Pin Male (Input)
Ground/Shield	Pin 1	Pin 1
Data (-) Signal	Pin 2	Pin 2
Data (+) Signal	Pin 3	Pin 3
Not Used		Pin 4
Not Used		Pin 5

### Setting Up A DMX Serial Data Link

1. Connect the (male) 3-pin connector side of the DMX cable to the output (female) 3-pin connector of the controller.
2. Connect the end of the cable coming from the controller which will have a (female) 3-pin connector to the input connector of the next fixture consisting of a (male) 3-pin connector.
3. Then, proceed to connect from the output as stated above to the input of the following fixture and so on.

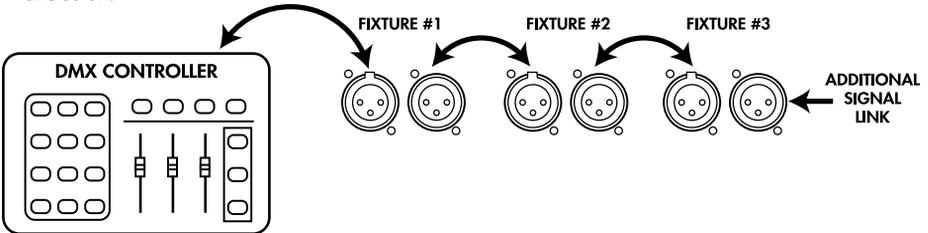

### General Maintenance

To maintain optimum performance and minimize wear, fixtures should be cleaned frequently. Usage and environment are contributing factors in determining frequency. As a general rule, fixtures should be cleaned at least twice a month. Dust reduces performance and can cause overheating. This can lead to reduced lamp life and increased mechanical wear. Be sure to power off fixture before conducting maintenance.

- Unplug fixture from power.
- Use a vacuum or air compressor and a soft brush to remove dust collected on external vents.
- Clean all glass when the fixture is cold with a mild solution of glass cleaner or Isopropyl Alcohol and a soft lint-free cotton cloth or lens tissue.
- Apply solution to the cloth or tissue and drag dirt and grime to the outside of the lens.
- Gently polish optical surfaces until they are free of haze and lint.

The cleaning of external optical lenses and/or mirrors must be carried out periodically to optimize light output. Cleaning frequency depends on the environment in which the fixture operates. Damp, smoky or particularly dirty surroundings can cause greater accumulation of dirt on the unit's optics. Clean with soft cloth using normal glass cleaning fluid. Clean the external optics at least every 20 days. Clean the fixture at least every 30/60 days.



Always dry parts carefully after cleaning them.



Never spin a fan using compressed air.

## TECHNICAL SPECIFICATIONS

### Weight & Dimensions

Length: 6.86" (174.3mm)  
 Width: 5.78" (147mm)  
 Height: 8.98" (228.1mm)  
 Weight: 5.64 lbs (2.56 kg)

### Power

Auto-Ranging Power Supply: 100~240 VAC, 50/60 Hz  
 Power Consumption @ 120 V: 58 W max, 0.78 A inrush  
 Power Consumption @ 230 V: 58 W max, 0.45 A inrush  
 Fuse 3.15A

### Light Source

Wash Light LEDs	x4 (6-watt, RGBW)
Lux @ 2m	1,339
Beam Angle	4°
Field Angle	25°
Moonflower LED	x1 (8-watt, RGBW)
Lux @ 2 m	1242
Beam Angle	4°

### Thermal

Maximum Ambient Temperature 104° F (40° C)  
 Cooling Fan

### Motion

Y-Axis Rotation Continuous  
 X-Axis Rotation 540°

## WARRANTY

### One (1) Year Limited Warranty

Subject to the limitations set forth below, Venue® hereby represents and warrants that the components of this product shall be free from defects in workmanship and materials, including implied warranties of merchantability or fitness for a particular purpose, subject to normal use and service, for one (1) year (ninety (90) days on lamps) to the original owner from the date of purchase.

Retailer and manufacturer shall not be liable for damages based upon inconvenience, loss of use of product, loss of time, interrupted operation or commercial loss or any other incidental or consequential damages including but not limited to lost profits, downtime, goodwill, damage to or replacement of equipment and property, and any costs of recovering, reprogramming, or reproducing any program or data stored in equipment that is used with Venue® products. This guarantee gives you specific legal rights. You may have other legal rights which vary from state to state. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Venue Lighting Effects


P.O. Box 5111, Thousand Oaks, CA 91359-5111

[www.venuelightingeffects.com](http://www.venuelightingeffects.com)

All trademarks and registered trademarks mentioned herein are recognized as the property of their respective holders.

Made in China.



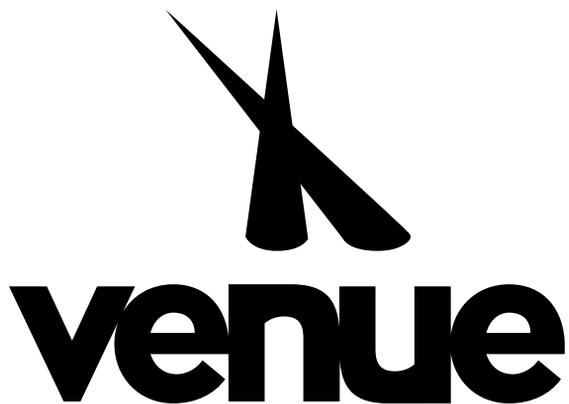

[www.venuelightingeffects.com](http://www.venuelightingeffects.com)

1907-19356055