


STROBE LIGHT USER MANUAL

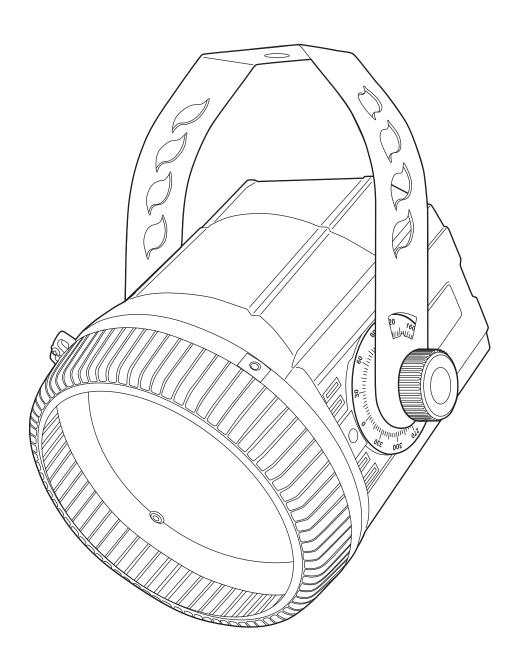

GENERAL INFORMATION

Ideal for parties, clubs, mobile DJs, and more, the Venue[™] Strobe will make any event special. By adjusting the speed knob, you can set the flash rate for striking light effects.

SPECIFICATIONS

Power Input: 120VAC 60Hz Lamp: 45W Helical Xenon lamp

Flash rate: 1-12 fps Fuse: 3.15A 125V

Size: L 9" x W 9" x H 7.87" Weight: 2.87 lbs./1.30 kg.

IMPORTANT SAFETY INSTRUCTIONS

- 1. For your protection, follow all instructions in this user manual and observe all safety warnings.
- 2. Never operate this unit if it has a damaged cord or plug.
- 3. Keep cord away from heated surfaces.
- 4. Keep air openings free of lint, hair, and other debris.
- 5. Never drop or insert any object into air openings.
- 6. Never operate the unit if air openings are blocked.
- 6. Do not use outdoors. For indoor use only.
- 7. Keep out of reach of children.
- 8. Do not open or tamper with the unit for any reason. No user-serviceable parts inside. The lamp is non-replaceable.
- 9. Allow only a professional technician to replace the fuse. Use only a correctly rated fuse.

HOW TO OPERATE

- 1. Install the unit using clamp and safety cable
- 2. Plug unit into AC power outlet and turn the speed control knob on the back of the unit to adjust strobe speed.

WARRANTY

One (1) Year Limited Warranty

Subject to the limitations set forth below, Venue[™] hereby represents and warrants that the components of this product shall be free from defects in workmanship and materials, including implied warranties of merchantability or fitness for a particular purpose, subject to normal use and service, for one (1) year (ninety (90) days on lamps) to the original owner from the date of purchase.

Retailer and manufacturer shall not be liable for damages based upon inconvenience, loss of use of product, loss of time, interrupted operation or commercial loss or any other incidental or consequential damages including but not limited to lost profits, downtime, goodwill, damage to or replacement of equipment and property, and any costs of recovering, reprogramming, or reproducing any program or data stored in equipment that is used with Venue™ products. This guarantee gives you specific legal rights. You may have other legal rights which vary from state to state. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Venue Lighting Effects P.O. Box 5111 Thousand Oaks, CA 91359-5111 www.venuelightingeffects.com

All trademarks and registered trademarks mentioned herein are recognized as the property of their respective holders.

Made in China.

0804-8104.01

IMPORTANT SAFETY INSTRUCTIONS



This symbol is intended to alert the user to the presence of non-insulated "dangerous voltage" within the products enclosure.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the unit.



 
Apparatus shall not be exposed to dripping or splashing. Objects filled with liquids, such as vases, shall not be placed on the apparatus.







- 1. Read all safety and operating instructions before using this product.
- 2. All safety and operating instructions should be kept for future reference.
- 3. Read and understand all warnings listed on the operating instructions.
- 4. Follow all operating instructions to operate this product.
- 5. This product should not be used near water, i.e., bathtub, sink, swimming pool, wet basement, etc.
- 6. Only use dry cloth to clean this product.
- 7. Do not block any ventilation openings, it should not be placed flat against a wall or placed in a built-in enclosure that will impede the flow of cooling air.
- 8. Do not install this product near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
- 9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus. Do not break the ground pin of the power supply cord.
- 11. Only use attachments specified by the manufacturer.
- 12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, exercise caution when moving.
- 13. Unplug this apparatus during lightning storms or when unused for a long period of time.
- 14. Care should be taken so that objects do not fall and liquids are not spilled into the unit through the ventilation ports or any other openings.



- 16. WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- 17. When a mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

